




Rear Cargo Door Skreenz™ Instructions for all 2007 and newer Sprinters

Rear Cargo Door Skreenz™ are designed to be attached via adhesive-backed Velcro to the inside of the van's rear cargo door frame

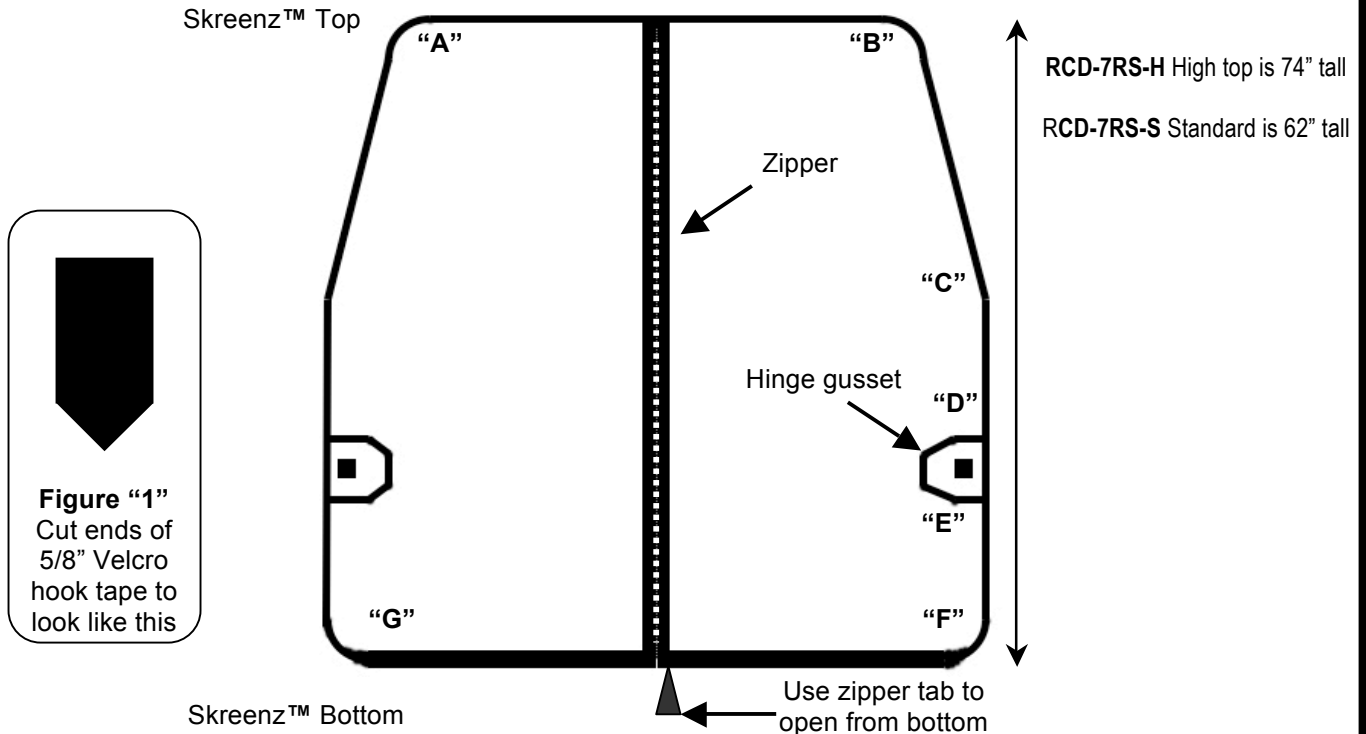

Instructions for Installing Rear Cargo Door Skreenz™

- 1 – Open rear cargo doors. Skreenz™ will be hung along the side and top metal exposed at the edge of the rear fabric trim near the opening, and on the bottom metal floor bar. Thoroughly clean all the metal surfaces with alcohol where Velcro tape will be applied.
- 2 – Unroll the provided 22 foot roll of 5/8" adhesive-backed Velcro hook tape. Attach the Velcro hook tape along the top of the door opening "A"- "B". Run the tape behind the metal latch plates and run it towards the outside of the top corner area. (See photos at www.Skreenz.com/Sprinterinstallation for color photos.) Make sure to cut the ends of the Velcro to an arrow-shaped point (Fig. 1) to prevent "edge peel". Carefully press the adhesive backed Velcro hook tape into place.
- 3 – Shut the doors and locate the centerline for the top and bottom where the doors meet. Temporarily hang the Rear Cargo Door Skreenz™ with the inside of the zipper facing in. Find centerline and then install bottom piece of Velcro with the zipper at the center line between "F" and "G". The bottom Velcro should be placed onto the bottom metal strip with the top creased over parallel with the floor. (If there is no metal, Velcro will need to be reinforced with rivets or encased plastic trim clips inserted by drilling through the Velcro and into the plastic or metal then inserting the black plastic pin.)
- 4 – Disengage both of the door latches and apply short strips of Velcro along the sides near the outer edge of the metal. Apply a strip of Velcro from the bottom tape up to the hinge indentation on the side metal "E" to "F".
- 5 – Hang the Skreenz™ from the top center "A"- "B", not worrying about the top corners. Fit the Skreenz™ along the bottom first "F"- "G", centering and reattaching the latches through the flap opening in the hinge gusset until the bottom has a centered fit. Velcro need not be placed in the indentation behind the flap "D"- "E" since the hinges will secure it. From there, determine where the top corner "B"- "C" and side Velcro strips "C"- "D" should be placed for a centered fit. Apply side strips of Velcro along the side outer edge of the inside metal just above the hinge indentation "C"- "D" and meeting with the top strip of Velcro "B"- "C".
- 6 – Both the Skreenz™ and Velcro hook tape can be readjusted for a centered fit during installation. When it is centered, remove the whole Skreenz™, protect your fingers, and press firmly along all the strips of Velcro for a tight seal. Allow the adhesive Velcro tape to "cure" for 48 hours before re-attaching the Skreenz™.

Notes: To wash Rear Cargo Door Skreenz™ - Use warm soapy water and a soft bristle brush, rinse with clean water and allow to air dry. If the Velcro adhesive ever starts to release from the surface of the van, it can be reinforced with small beads of RTV adhesive silicone cement that will not harm the vehicle's painted surfaces.

Made in the USA by Skreenz by Blethen, Box 4, Marshall NC 28753 USA

Phone: 828-606-3130

e-Mail: Blethen@Skreenz.com

www.Skreenz.com